

RapIDmatic

Instructions for use


1

Ensure loader/cutter is in the locked position (at front of applicator)




2

Roll RapIDTags towards you firmly. Bias the pins outwards to avoid jamming.

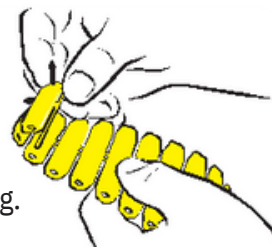


3

Leave the last two RapIDTags unrolled.

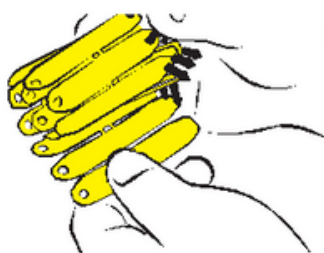

4

Load into drum.

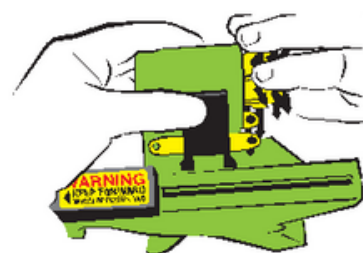

5

Depress the clamp (A) firmly. Slide tags out until location lugs are between first and second tags. |



6

Pull trigger to move tag into the Load position.



7

Pull topslide back to cut the tag.



8

Push topslide forward to load into applicator jaw.



9

Check tag position.



10

Select optimum position on ear for tag. Pull trigger to apply.

